



JAW LOCK INSTALLATION MANUAL ASSEMBLY

CURT COMPATIBLE 5TH WHEEL LEGS

16021L

Part List

| Item# | Qty | Description |
|-------|-----|---------------|
| 1 | 1 | Jaw Lock |
| 2 | 1 | Bolt Lock |
| 3 | 1 | Bolt Lock Key |

WARNING

Never exceed the vehicle manufacturer's recommended towing capacity. This may result in separation, damage to 5th wheel hitch, vehicle, trailer and / or cause serious injury or death.

Do not expose hands, body parts or clothing anywhere between the truck and trailer. Extreme care should be observed to avoid serious injury to self, property, and observers.

Never position yourself or others under the trailer's kingpin area (danger zone) during coupling and uncoupling. Improperly coupled trailers can separate and drop without notice.

Step 1


Remove the four lynch pins securing the locking handles to the legs. Swing all four handles completely open and lower the legs into position in the bed of the truck. Ensure all four locking bolts and spacers drop into the mounting holes before attempting to close the handles.

Step 2

With the legs secured and positioned in truck bed mounts, rotate the handles back to the closed position. Secure the handles by re-inserting all four lynch pins.

Step 3

Remove (Lock) from Jaw Lock. Slide cap over locking handle until a snug fit is achieved. Slide the bolt lock through bottom holes of the Jaw Lock.

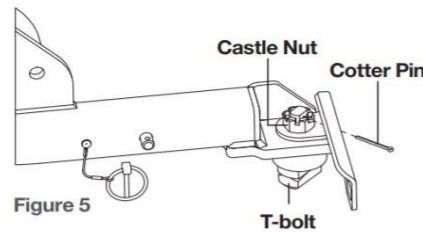

Step 4

Once the bolt lock is fixed in place use the included key to lock the fifth wheel hitch in place. Once all steps have been completed proceed to towing your trailer knowing it is safe and secure.

